

Ork Hunter
HC-3 WiFi Trail camera

User Manual

Ork Hunter

Table of Contents

1.	<i>Product overview</i>	3
2.	<i>System Setup</i>	4
3.	<i>Power Supply</i>	6
4.	<i>Inserting Storage Media</i>	6
5.	<i>Basic Operation</i>	7
5.1.	Turn ON and turn OFF	7
5.2.	Take Photos, Record Video, Playback	7
6.	<i>Aligning the camera</i>	7
7.	<i>Working Mode</i>	8
8.	<i>Assembly with strap</i>	8
9.	<i>Using the wall bracket</i>	8
10.	<i>Remote Control by Mobile App/ Wi-Fi Connecting</i>	10
11.	<i>Connecting to TV</i>	13
12.	<i>Download files to the computer</i>	14
12.1.	Using a card reader	14
12.2.	Connecting the device to a PC through the USB cable	14
13.	<i>Notes on cleaning</i>	14

1. Product overview

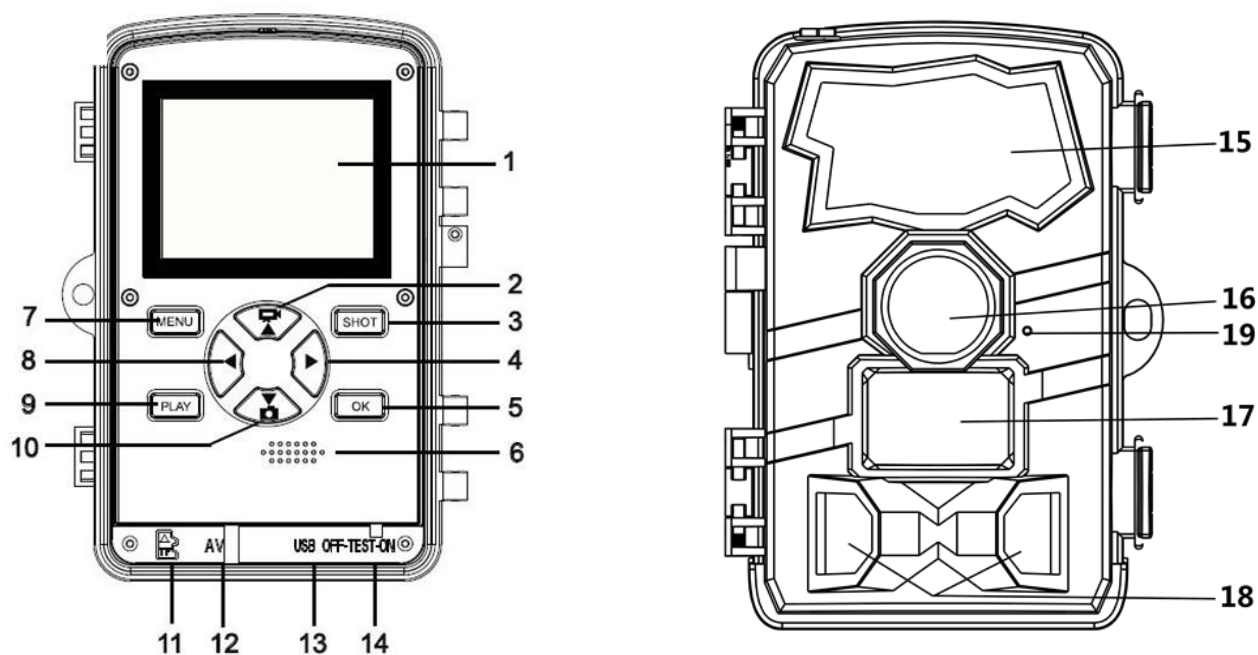


Fig.1. Product overview

1. Display Screen
2. Up/Video Button
3. Shot Button
4. Right Button
5. OK Button
6. Speaker
7. Menu Button
8. Left Button
9. Playback Button
10. Down/Photo Button
11. Micro SD Card Slot
12. AV Jack
13. USB Jack
14. OFF-TEST-ON
15. Infrared LEDs
16. Lens
17. Front Motion Sensor
18. Side Motion Sensor
19. Indicator light

2. System Setup

Switch Mode Button to “Test”, then you can set the system parameters.

1. Press Menu button to open the setup menu.
2. Press Up/Down button to scan all menu. Then press OK button to enter the options interface.
3. Press Up/Down button to scan all options. And press OK button to confirm options.
4. Press Menu button again to turn back to last menu or exit the setup menu.

Setup menu and function as below:

Mode	Set the working mode. In photo mode, the camera just take pictures. In Video mode, the camera just record video. In photo & video mode, the camera will take a photo first, then start to record video. Options : [Photo]/[Video]/[Photo & Video]
Photo Resolution	Set the still image resolution. Options : [48MP(8000x6000P)]/[32MP: 6480x 4860]/[20MP: 5200x 3900]/[16MP: 4608x3456]/[12MP(4000x 3000P)]/[8MP (3264 x2448P)]/[5MP(2592x1944P)]/[3MP(2048x 1536P)]/[1MP(1280x960P)].
Photo Series	Set the photo number of continuous shooting. In photo mode, the camera will take photos continuously. Options : [1 photo]/[2 photos in series]/[3 photos in series]/[10 photos in series].
Video Resolution	Set the video resolution. The higher the resolution, the shorter the duration of the video that can be stored, and vice versa. Options : [3840 x 2160P]/[2688 x 1520 P 20fps]/[1920 x 1080P]/ [1280x720P]/ [1280x720P 60fps]/[848x480P]/ [720x480P]/ [640x480P]/ [320x240P].
TL Video Resolution	Set the resolution of time lapse video . Options:[5200 x 3900P]/[4608 x 3456P]/[4416 x 3312P]/[4000 x 3000P]/[3648 x 2736P]/[3264x2448P]/[3072 x 2304P]/[2592x1944P]/[2048x1536P].
Video Length	Set the duration of recording a video clip. The shortest time is 3 seconds and the longest time is 2 minutes. Options : 3 seconds~2 minutes
Audio Recording	Open this function, the camera will record audio when recording video. Options : [On]/[Off].
Shot Lag	Set the time of delay shooting when the camera detects the motion. In the selected time, the camera will not record any image or video. This function can avoid to store too much same event and save more capacity. Options : 5 seconds~60 minutes.
Side Motion Sensors	Open/close the side motion sensors. Options:[On]/[Off].
Sensitivity Motion Sensors	Set the sensitivity of the sensor. Environmental impact is small indoors, you can choose “Low”. In outdoor, choose “Middle” in normal condition. Choose “High” if the environment impact is huge outdoors. The temperature can also influence the

	<p>sensor sensitivity. "High Sensitivity" applies to mild environment. "Low Sensitivity" applies to cold environment.</p> <p>Options : [Low]/[Middle]/[High].</p>
Target Recording Time	<p>Set the target recording time. You can set the start and stop time. The camera will work just in the stated time slot. In other time, the camera will keep in standby state.</p> <p>Options : [On]/[Off].</p>
Time Lapse	<p>[Normal]: The camera will take pictures automatically as per set time interval. For example, set the interval time to 1 hour, the camera will take a photo each hour. If you want to observe that a plant blooms, the camera will take 24 photos in 24 hours to record the whole process of blooming.</p> <p>[TL Video]: You can set the interval time. The time range is from 3 second to 24 hours. For example, set the interval to 1 hour, the camera will take a photo each hour. If the camera works for 24 hours, there will be 24 photos. These photos will be converted into a video.</p> <p>[Off]: Close the time lapse function.</p>
Language	<p>Set the language display on screen.</p> <p>Options : [English]/[Deutsch]/[Dansk]/[Suomoi]/ [Svenska]/[Español]/ [Français]/ [Italiano]/[Nederlands]/ [Portugués]/[简体中文]/[繁体中文]/[日本語].</p>
Endless Capture	<p>Set the camera to record video in loop. Options : [On]/[Off].</p>
Time & date	<p>Set the date and time of camera.</p> <p>The date format: dd/mm/yyyy, yyyy/mm/dd, mm/dd/yyyy.</p> <p>The time format: 24h,12h.</p> <p>Press Right button to choose the item. Press Up/Down button to adjust the value. And press OK button to confirm.</p> <p>Options : [Set time & date]/[Time format]/[Date format].</p>
Photo Stamp	<p>Stamp the date & time on the photos or not.</p> <p>Options : [Time & date]/[Date]/[Off].</p>
Password Protection	<p>Set the power-on password of the camera. The password is four digits, each digit ranges from 0 to 9 or A to Z.</p> <p>If you forget the password, please reset the camera. Then all parameters will reset to the factory settings.</p> <p>Options : [On]/[Off].</p>
WIFI SSID	<p>Set and change the WIFI name.</p>
WIFI Password	<p>Set and change the WIFI password.</p>
Beep Sound	<p>Open/close the button sound.</p> <p>Options : [On]/[Off].</p>
Format Memory Card	<p>Formatting the memory card will delete all data permanently. Before using a new memory card or a card that has been used in another device previously, please format the memory card.</p>

	Options : [Yes]/[No].
Serial NO.	Set the unique serial number for the camera. The number is four digits each digit ranges from 0 to 9 and A to Z. Options : [On]/[Off].
Reset Settings	Restore the camera to factory default settings including password, serial number and so on. Options : [On]/[Off].
Version	Look up the Firmware information of the camera.
GPS	Support to manually add GPS latitude, longitude, and altitude positioning information (You can find the longitude, latitude and altitude information of the device installation place through the mobile compass APP). After taking the photo, you can use the iPhone or Google Maps to open it and you can find out where the photo was taken.

3. Power Supply

Please install batteries before using the camera.

- Open the time-lapse camera case and remove the battery cover. Install 8 pieces of 1.5V AA batteries. Or 1.2V brand rechargeable batteries. Please make sure the electrode is correct.
- If the camera is in low power, please connect the camera to a power adapter(not provide) for power supply (The specification of the adapter is DC6.0V/2A). Locate the rubber seal on the bottom of the camera and open it. Connect one end of the power adapter to the hunting machine, and the other end to the power source for power supply.

4. Inserting Storage Media

Please prepare a SD card and insert it into the camera for saving more files. Before recording, please format the memory card first.

- Support Micro SD card, up to 512GB. Suggest to use at least class 10 or above high speed card.
- To avoid malfunction, the memory card should be far away water, strong vibration, dust, hot source and direct sunlight.
- Do not insert the memory card forcibly. Please refer to the marking on the camera.
- For the first time use, please wait for the memory card temperature reach the ambient temperature. The camera will be short-circuit influenced by environment temperature and humidity. Please notice protection for the camera when using it outdoor.
- If the capacity of memory card is full, the time-lapse camera will stop recording automatically.
- Press the edge of the card gently to pop-up the SD card.

5. Basic Operation

5.1. Turn ON and turn OFF

Switch the Mode Button to “Test/On” to turn on the camera.

Switch the Mode Button to “Off” to turn off the camera.

5.2. Take Photos, Record Video, Playback

Switch the Mode Button to “Test”. In this mode, you can take photos, record video and playback files manually.

- **Take Photos:** Press Down/Capture button to switch to photo mode. Press OK/Shot button to take a picture.
- **Record Video:** Press Up/Video button to switch to video mode. Press OK/Shot button to start to record a video clip. Press OK/Shot button again to stop recording.
- **Playback:** Press Playback button to enter the playback interface. Press Up/Down button to scan photos or video. When playback video, press OK/Shot button to play the video. Press OK/Shot button again to have a pause. Press Menu button to stop playback. Press Playback button again to exit the playback mode.

Playback menu list :

Menu	Function
Delete	Delete the current file in memory card. Options: [Cancel]/[Delete].
Delete All	Delete All files in memory card. Options: [Cancel]/[Delete].
Activate slide show	Playback the photos in slide way. Each photo display 3 seconds. Press OK button to stop playing.
Write protect	Lock the file. It can avoid accident deletion. Options: [Write-protect current file]/[Write-protect all files]/[Unlock current file]/[Unlock all files].

6. Aligning the camera

In test mode you can adjust the optimum exposure angle and the range of the motion sensors. During alignment, consider whether the use of the side motion sensors may be useful for attaining the desired observation results. You can activate/deactivate the side motion sensors using the above-described menu.

Please adjust the camera as follows:

1. Fasten the camera to a tree or similar object at a height of 1–2 meters and align the camera in the desired direction. Then move slowly from one side of the target area to the other side. While doing this, monitor the motion display.

2. If this lights turn green, you are detected by one of the activated side motion sensors . If lights turn red, you are detected by the front motion sensor . By this way, you can align the camera to the best angle and distance.

7. Working Mode

Switch the Mode Button to “On”. After turning on the camera, the screen will display 15 seconds countdown. Then the LEDs and screen will go out. The camera begins to operate independently and enter standby mode.

If the wild animals enter the detection range of the motion sensors, the camera will be activated and detect the motion trail. If the wild animals continue to move to the detection zone of the sensor, the camera will take photos or record video automatically. When the wild animals leave the detection zone of the sensors, the camera will be deactivated and turn back to standby mode.

8. Assembly with strap

Use the securing strap supplied to attach the Wildlife Camera to a tree or another object. The illustrations below demonstrate how to fasten the securing strap.



Fig.2. Assembly with strap

9. Using the wall bracket

You can mount the camera permanently on a wall or tree using the supplied wall bracket. Before mounting the wall bracket you should ensure that all existing screws are tight. The best installation height distance from the ground about 1 meter.



Fig.3. Wall bracket

1. Tripod screw
2. Lock nut
3. Pivot bolts
4. Drill holes
5. Hexagonal screw
6. Wall plugs
7. Screws

Mounting the wall bracket

Required tools

- Drill
- 6 mm masonry/concrete drill bit
- Phillips head screwdriver

CAUTION

Ensure that there are no electric lines, water or heating pipes installed at the proposed drilling location.

The supplied wall plugs are only suitable for mounting on concrete and stone. Before starting the installation, please check your installation location carefully for its suitability for the plugs.

The assembly material used must be suitable for the respective location. If in doubt, consult a professional.

Install Steps

- Mark the drill holes by holding the foot of the wall bracket at the desired mounting location and marking the hole positions.
- Use a drill with a 6 mm drill bit to drill the required holes and insert the plugs and insert the wall plugs flush with the wall.
- Screw the wall bracket to the wall using the supplied screws.
- Mount the camera on the tripod screw and screw the camera a little way on (about three turns).
- Turn the camera in the desired direction and lock it with the lock nut.

- To move the camera into its final position, undo the two pivot bolts a little, position the camera and fix the position by tightening the two pivot bolts.

10. Remote Control by Mobile App/ Wi-Fi Connecting

Download the APP "OMGCam" by scanning the QR code below.



Fig. 4. "OMGCam" QR code

Connect of Camera and Pad/Smartphone via WiFi

1. Switch the camera button from "OFF" to "ON".
2. After the 15 seconds countdown finishing, the camera enter sleep working mode (if the camera is already under working mode, can ignore step 1 and step 2).
3. Open the "OMGCam" APP and click the "Add Camera" button on the APP, a new interface will pop up, please click the device you want to connect and click "+Add". And the permission settings about "OMGCam" will automatically pop up, please enable all permissions of the app so that the program can operate normally. Please enter the WIFI page, and find the WIFI hot spot with the name "OMGCam*****" (if you could not see this hot spot, need to wait or refresh about one minute), then enter the initial password "12345678" to enter the WIFI connection;

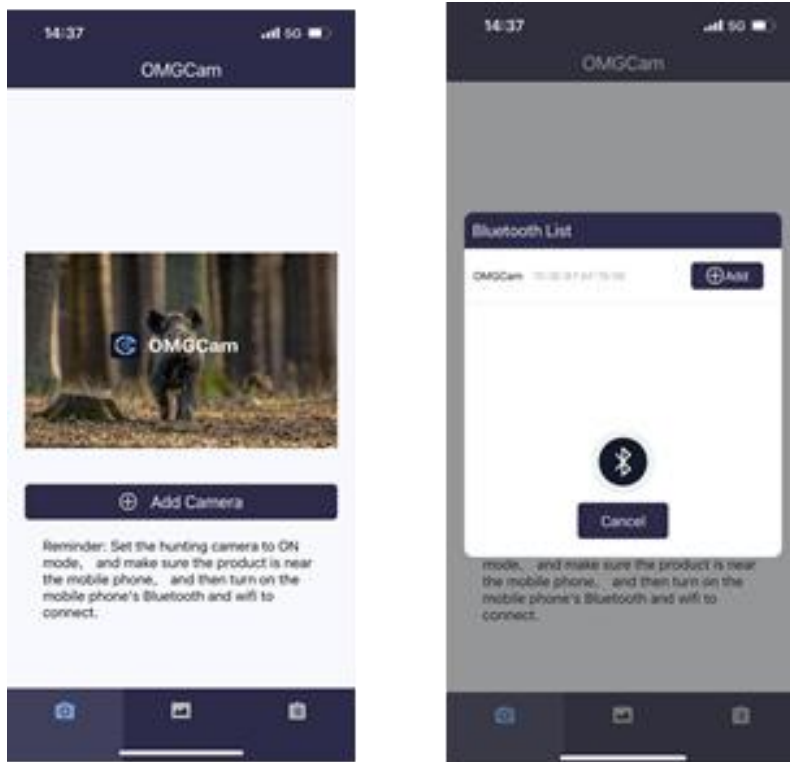


Fig.5. "Add Camera" in OMGCam App

4. After WIFI connection is successful, turn back to APP interface, you can do functional operation in the APP. (view files of the TF card, settings, device information preview, albums,etc.)

Note: When the camera is in a low battery state, it will not be able to connect to WiFi (You will not find the WIFI hot spot)

5. After setting finished in APP, turn back to the APP main interface. Click the power-off icon on the top right corner or exit the APP (Save power). The camera will enter sleep working mode.

Note: After the device has been added to the APP, when opening the APP again, you only need to connect the camera, and then click the device to be connected, no click "Add Camera" button.

The camera app interface function is described below:

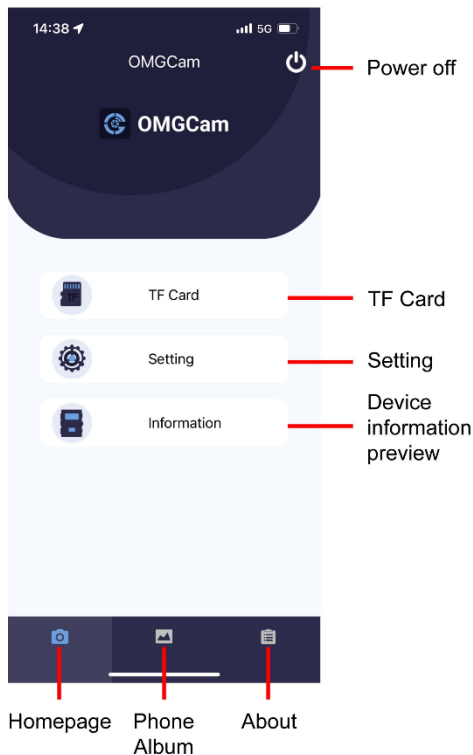


Fig.6. App interface

TF card button

Click memory card button, user will see the photo and video files stored in the TF card. Click the icon EDIT on the top right corner, then can choose the picture or video to download or delete the files, you also can select all.

Setting button

Click Setting button, user will see the setup menu list of camera. Can set the parameters of camera on APP.

Information preview button

Click information review button, user will see below interface shown the information of camera storage, number of files and battery. User also can see a real-time video viewed by camera.

Note: You can change the installation angle through slightly moving the camera, and adjust the camera to the best installation angle.

When you click button one time, enter to choice the mode, click again to take a photo;

When you click the button one time, enter to choice the mode, click again to take video.

Phone album

User can review the photo and video files downloaded in the pad or smartphone album. Can zoom in image, playback, choose, delete and share files.

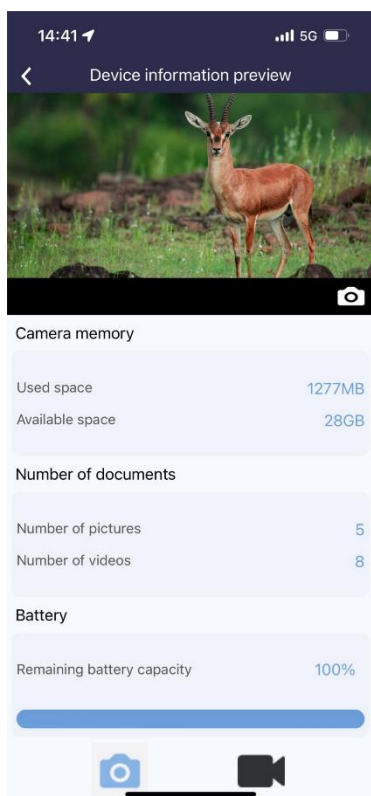


Fig.7. Device information preview

Tips:

1. When connecting to WIFI, if the distance between the phone and the camera is closer, the WIFI signal will be stronger, the stability will be better, and the download speed will be faster;
2. If you cannot connect to the camera's WIFI or the connection is unstable within 6-25 meters to the camera, please approach the camera and operate again (The fastest download speed is 1.5MB/S);
3. After the operation of the APP, it is suggested to click the Power-off button in the upper right corner to shut down the APP. The camera will enter the sleep-hunting mode to save battery power;
4. When the product enters WIFI mode, if the mobile phone fails to connect WIFI after 3 minutes, the product will automatically enter sleep-hunting mode;
5. When WIFI connection is successful. If there is no information interaction between the camera and the mobile phone, the camera will automatically disconnect after 3 minutes and enter the sleep mode, and you need to reconnect to WIFI.

11. Connecting to TV

The camera can transfer the video signal to an external monitor or a television. Please follow below instructions to operate.

1. Connect the camera to the TV via provided AV cable.
2. Turn on the TV and set it to AV mode.
3. Turn on the camera, switch the Mode Button to "Test".
4. Once connection is successful, the camera will enter playback mode and the screen turn black. The image will show on the TV.

12. Download files to the computer

There are two ways to download files from the memory card to a computer:

- By inserting the memory card into a card reader
- By connecting the camera to a computer using the supplied USB cable.

12.1. Using a card reader

1. Pop-up the memory card from the camera and insert it into a card reader. Then connect the card reader to a computer.
2. Open [My Computer] or [Windows Explorer] and double-click the removable disk icon that represents the memory card.
3. Copy image or video files from the memory card to your computer.

12.2. Connecting the device to a PC through the USB cable

1. Connect the camera to the computer via USB cable. Turn on the camera, the screen will display "MSDC".
2. Open [My Computer] or [Windows Explorer]. A "Removable Disk" appears in the drive list. Double-click the "Removable Disk" icon to view its contents. All files are stored in the folder named "DCIM".
3. Copy the photos or files to your computer.

13. Notes on cleaning

Before cleaning the device, disconnect it from the power supply! Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid. Clean the eyepieces and/or lenses only with a soft, lint-free cloth, (e.g. microfibre cloth). To avoid scratching the lenses, use only gentle pressure with the cleaning cloth. Protect the device from dust and moisture. Store it in a bag or box.